



UplandHunter™ SDR-BEEP Add-A-Dog® Operating Guide

Please read this entire guide before beginning



Thank you for choosing SportDOG Brand™. Used properly, this product will help you train your dog efficiently and safely. To ensure your satisfaction, please review this owner’s manual thoroughly. If you have questions regarding this product’s operation, please see this manual’s Frequently Asked Questions or Troubleshooting section, contact our Customer Care Center at 1-800-732-0144, or visit our website at www.sportdogbrand.com.

Table of Contents

Key Definitions - Collar Receiver	3
Key Definitions - Remote Beeper	3
Prepare the Collar Receiver.....	4
Prepare the Remote Beeper	5
Reset the Collar Receiver	6
Reset the Remote Beeper	6
Program the Collar Receiver for Two-Dog Operation (for SD-1800, SD-1850 and SD-2000 Remote Transmitters)	7
Program the Remote Beeper for Two-Dog Operation (for SD-1800, SD-1850 and SD-2000 Remote Transmitters)	7
Program the Remote Beeper (for SD-1800 and SD-2000 Remote Transmitters).....	8
Operate the Remote Beeper Using the Non-UplandHunter™ Transmitter	8
Fit the UplandHunter™ SDR-BEEP to Your Dog.....	9
Frequently Asked Questions	11
Troubleshooting.....	12
Terms of Use and Limitation of Liability	14

Key Definitions - Collar Receiver

Collar Receiver: Receives the radio signal from the Remote Transmitter and delivers the stimulation for correcting your dog. It is waterproof and can be submerged in water.


Receiver Indicator Light: Indicates when the Collar Receiver has been turned on or off and also serves as a low-battery indicator.

Contact Points: The contacts through which the Collar Receiver delivers stimulation when the Remote Transmitter's upper or lower button is pressed.

On/Off Button: Turns the Collar Receiver on and off.

Charging Jack (With Cover): For connecting the charger. Although the Collar Receiver is waterproof without the rubber cover, keep the cover in place when not charging to keep debris out of the opening.

Collar Receiver

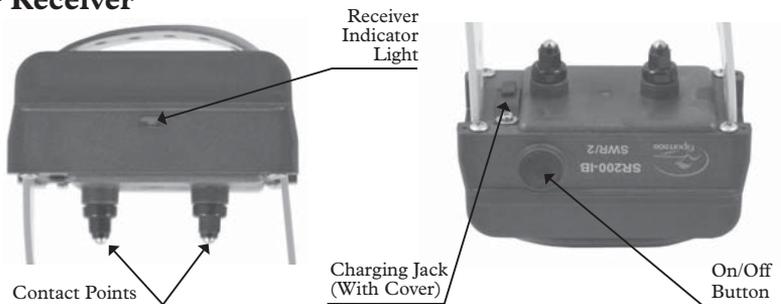

Key Definitions - Remote Beeper

Remote Beeper: Receives the radio signal from the Remote Transmitter and beeps with a tone and frequency set by the user. It is waterproof and can be submerged in water.


On/Off Button: Turns the beeper on and off. The Remote Beeper functions can be disabled from the Remote Transmitter, but the Remote Beeper should be turned off using this button when not in use to conserve battery life.

Indicator Light: Verifies that Remote Beeper is functioning and also serves as a low-battery indicator.

Beeper Speaker: The point at which the sound is produced.

Battery Compartment: Holds the Remote Beeper's 3-volt lithium battery.

Remote Beeper

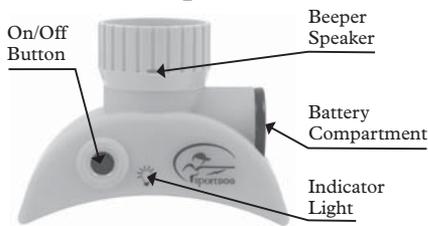

Prepare the Collar Receiver

Charge the Collar Receiver


1. Lift the rubber cover protecting the Charging Jack.
2. Connect the charger connector to the Charging Jack.
3. Plug the charger into a standard 110-volt AC wall outlet.
4. Charge the Collar Receiver for 24 hours for the first charge. Recharges take only 12 hours.

Note: The Receiver Indicator Light will flash after 12 hours of charging. For the first charge, continue to charge the Collar Receiver for an additional 12 hours.

5. When charging is completed, replace the rubber cover.

If the Collar Receiver is used in or around salt water, the Collar Receiver should be rinsed with fresh water following each use. Prior to rinsing, the rubber Charging Jack cover should be removed. Replace it after the Collar Receiver has air-dried.

Charger connector placed in Collar Receiver Charging Jack

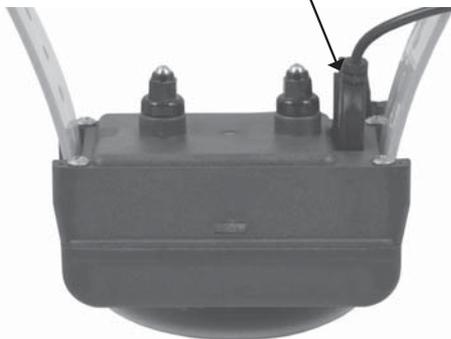

To Turn the Collar Receiver On:

1. Press and hold the On/Off Button until the Receiver Indicator Light comes on and the Collar Receiver beeps 5 times.
2. Release the On/Off Button.

The Receiver Indicator Light will flash until the Collar Receiver is turned off. The flashing light indicates the Collar Receiver is ready to receive a radio signal from the Remote Transmitter.



On/Off Button

To Turn the Collar Receiver Off:

1. Press and hold the On/Off Button until the Receiver Indicator Light comes on and the Collar Receiver beeps 2 times.
2. Release the On/Off Button.

To extend the life between charging cycles, turn the Collar Receiver off when it is not in use. Approximate battery life between charges is 40 to 80 hours, depending on frequency of use.

Receiver Indicator Light

Collar Receiver Function	Indicator Light Response
Collar Receiver on – good battery	Flashes once per second
Collar Receiver on - low battery	Flashes once every 4 seconds
Continuous Stimulation button pressed	Solid in color
Momentary (Nick) Stimulation button pressed	Single flash

Prepare the Remote Beeper

Insert the Battery

1. Remove the battery cover.
2. Insert the CR-123 3-volt lithium battery with the positive (+) end facing outward.
3. Replace the battery cover.



To Turn the Remote Beeper On:

1. Press and hold the On/Off Button until the Remote Beeper's Indicator Light comes on and the Remote Beeper beeps 1 time.
2. Release the On/Off Button.

The Remote Beeper's Indicator Light will flash until the Remote Beeper is turned off. The flashing light indicates the Remote Beeper is ready to receive a radio signal from the Remote Transmitter.

To Turn the Remote Beeper Off:

1. Press and hold the On/Off Button until the Remote Beeper's Indicator Light comes on and the Remote Beeper beeps 2 times.
2. Release the On/Off Button.

Note: The Remote Beeper will provide approximately 100 hours of "on" time depending on how frequently the beeper function is activated and depending on which Tone Mode the Remote Beeper is set to.

Beeper Indicator Light

Remote Beeper Function	Indicator Light Response
Remote Beeper On – Good Battery	Flashes twice every second
Remote Beeper On – Low Battery	Flashes once every second

Reset the Collar Receiver

To reset the Collar Receiver to work with a new Remote Transmitter or to reprogram a new Collar Receiver to work with your existing Remote Transmitter:

- A. Turn the Collar Receiver off.
- B. Press and hold the On/Off Button. The Receiver Indicator Light will come on, then turn off after 4-5 seconds. If the On/Off Button is released too early, the Receiver Indicator Light will begin flashing as normal. If this occurs, start over and repeat from A.
- C. After the Receiver Indicator Light has turned off, release the On/Off Button.
- D. Press and hold the Upper Button on the Remote Transmitter until the Receiver Indicator Light flashes 5 times. You may need to hold both units 2-3 feet from each other before this occurs. Once the Receiver Indicator Light has flashed 5 times, the Collar Receiver has been reset and will begin flashing as normal. If the Receiver Indicator Light does not flash 5 times, start over and repeat from A.

Reset the Remote Beeper

To reset the Remote Beeper to work with a new Remote Transmitter or to reprogram a new Remote Beeper to work with your existing Remote Transmitter:

- A. Turn the Remote Beeper off.
- B. Press and hold the On/Off Button. The Remote Beeper's Indicator Light will come on, then turn off after 4-5 seconds. If the On/Off Button is released too early, the Remote Beeper's Indicator Light will begin flashing as normal. If this occurs, start over and repeat from A.
- C. After the Remote Beeper's Indicator Light has turned off, release the On/Off Button.
- D. Press and hold the Locate Button on the UplandHunter™ Remote Transmitter or the Tone Only Button on the SD-1800 and SD-2000 Remote Transmitters until the Remote Beeper's Indicator Light flashes 5 times. You may need to hold both units 2-3 feet from each other before this occurs. Once the Remote Beeper's Indicator Light has flashed 5 times, the Remote Beeper has been reset and will begin flashing as normal. If the Remote Beeper's Indicator Light does not flash 5 times, start over and repeat from A.

Program the Collar Receiver for Two-Dog Operation (for SD-1800, SD-1850 and SD-2000 Remote Transmitters)

SportDOG Collar Receivers can be set to respond to either the up or down toggle switch position. A SportDOG Add-A-Dog® receiver must be purchased to train a second dog in two-dog mode.

1. Flip the toggle switch **up** to the orange position to program the first Collar Receiver.
 - A. Turn the Collar Receiver off.
 - B. Press and hold the On/Off Button. The Receiver Indicator Light will come on, then turn off in 4-5 seconds. If the On/Off Button is released too early, the Receiver Indicator Light will begin its normal flashing. If this occurs, start over and repeat from A.
 - C. After the Receiver Indicator Light has turned off, release the On/Off Button.
 - D. Press and hold the Upper Button on the Remote Transmitter until the Receiver Indicator Light flashes 5 times. *Note: In mode 6, press and release the Upper Button repetitively until the Receiver Indicator Light flashes 5 times.* You may need to hold both units 2-3 feet from each other. If the Receiver Indicator Light does not flash 5 times, start over and repeat from A.
 2. Program the second Collar Receiver the same way using A. through D. above, but with the toggle switch **down** to the black position.
-

Program the Remote Beeper for Two-Dog Operation (for SD-1800, SD-1850 and SD-2000 Remote Transmitters)

A SportDOG UplandHunter™ Add-A-Dog® (SDR-BEEP) or SportDOG Accessory Beeper (SD-AB) must be purchased to train a second dog.

1. Flip the toggle switch on the Remote Transmitter to the up position.
2. Program the first Remote Beeper as follows:
 - A. Turn the Remote Beeper off.
 - B. Press and hold the On/Off Button. The Remote Beeper's Indicator Light will come on, then turn off in 4-5 seconds. If the On/Off Button is released too early, the Remote Beeper's Indicator Light will begin flashing. If this occurs, start over.
 - C. After the Remote Beeper Indicator Light has turned off, release the On/Off Button.
 - D. Press and hold the Locate Button on the UplandHunter™ Remote Transmitter or the Tone Button on the SD-1800 and SD-2000 Remote Transmitters until the Remote Beeper's Indicator Light flashes 5 times. (You may need to hold the units a few feet apart while doing this.) If the Remote Beeper Indicator Light does not flash 5 times, start over.
3. Program the second Remote Beeper the same way using A. through D. above but with the toggle switch in the down position.

Program the Remote Beeper (for SD-1800 and SD-2000 Remote Transmitters)

To set the tone

1. Reset the Remote Beeper (see page 6).
2. Turn the Remote Beeper off.
3. Press and hold the ON/OFF button. After 8 seconds, the Remote Beeper will start to emit the different tones. For a list of tones, refer to the chart on the right.
4. Continue holding the ON/OFF button until the desired tone is emitted. Release the ON/OFF button.

	TONE
1	Low Volume Hawk
2	High Volume Hawk
3	Bobwhite Quail Call
4	Triple Beep
5	Low Volume Beep
6	High Volume Beep
7	Double High Volume Beep
8	High Falling to Low Volume
9	Double High Falling to Low Volume

To set the Run Mode

To set the Run Mode, after the Tone has been programmed, press the ON/OFF button again within 2 seconds of the last release (from step 4 above). The Remote Beeper will emit a single beep for Mode 1, double beep for Mode 2, and a triple beep for Mode 3. When the desired Mode is heard, release the ON/OFF button. The unit will then go into normal operating mode and the LED will blink every second.

MODE 1	Silent	No beep when dog is running/Beeps once per second when dog is on point.
MODE 2	5 Second	Beeps every 5 seconds when dog is running/Beeps once per second when dog is on point.
MODE 3	10 Second	Beeps every 10 seconds when dog is running/Beeps once per second when dog is on point.

Operate the Remote Beeper Using the Non-UplandHunter™ Transmitter

In normal operating mode (Run Mode or Point Mode), if the Tone Button is pressed, the Remote Beeper goes into Locate Mode. In Locate Mode, at each press of the Tone Button, the Remote Beeper emits the programmed tone once and becomes silent (the Remote Beeper's functions are disabled). To resume the normal operating mode (Run Mode or Point Mode), press and hold the Tone Button for 3 seconds until a beep is heard on the Remote Beeper. The Remote Beeper will then exit the Locate Mode.

Fit the UplandHunter™ SDR-BEEP to Your Dog

This system is designed so you can add or remove the Remote Beeper to or from the collar strap as needed.

To Place the Remote Beeper on the Collar Strap:

1. Press the green rubber saddle into the opening at the bottom of the beeper.
2. Thread the end of the collar strap through the slot in the beeper. Continue sliding it through the slot in the saddle and then through the slots on the opposite side of the saddle and beeper.
3. Slide the saddle and Remote Beeper a few more inches up the Collar Strap.

Note: The saddle creates a very snug fit for the Remote Beeper. This snug fit is intentional to keep the Remote Beeper from sliding on the strap.




To Place the Entire System on Your Dog

1. With your dog standing, place the Collar Strap around the narrowest part of your dog's neck.
2. Ideally, the Collar Receiver should be centered at the front of the dog's neck and the Remote Beeper should be centered behind the dog's head. Slide the Remote Beeper as needed to position it properly.
3. The Collar Strap should fit snugly, yet be loose enough to allow one finger to fit between the strap and your dog's neck.
4. Allow your dog to wear the collar for several minutes, and then recheck the fit.

Remote
Beeper
Location

Collar
Receiver
Location

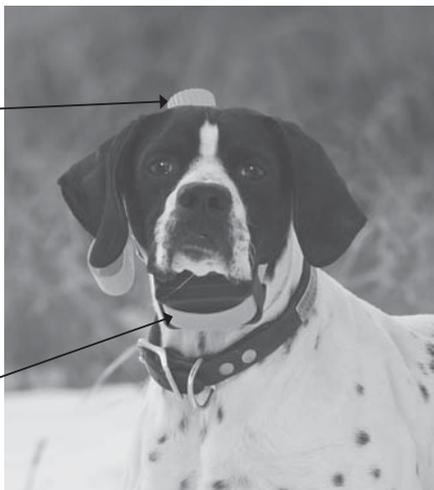

Note: The Remote Beeper can be used on the collar strap without the Collar Receiver. To remove the Collar Receiver, simply slide the saddle and Remote Beeper off of the strap, and then do the same with the Collar Receiver. Replace the saddle and Remote Beeper. The Remote Beeper, without the Collar Receiver, may shift due to movement.

Frequently Asked Questions

<p>Can I use the SDR-BEEP with any SportDOG Remote Transmitter?</p>	<p>Yes. All SpotDOG systems are compatible with each other. However, since the SD-3200 Remote Transmitter does not have a Tone Button, the Remote Beeper cannot be used. For all SD-400 series and SD-800 series Remote Transmitters, the SDR-BEEP cannot be used with more than one dog.</p>
<p>Is the stimulation safe for my dog?</p>	<p>While the stimulation is unpleasant, it is harmless to your dog. Electronic training devices require interaction and training from the owner to achieve desired results.</p>
<p>How old does a dog have to be before using the SDR-BEEP?</p>	<p>Your dog should be able to learn basic obedience commands such as “Sit” or “Stay.” The Collar Receiver may be too large for dogs under 8 pounds.</p>
<p>Once my dog is trained and has been obeying my commands, will my dog have to continue to wear the Collar Receiver?</p>	<p>Your dog may need to wear the Collar Receiver from time to time for reinforcement. Also, many hunters keep the Collar Receiver on their dogs while hunting for maximum control.</p>
<p>Is the Collar Receiver and Remote Beeper waterproof?</p>	<p>Yes. When changing the battery, make sure the o-ring is free from dirt and debris and in its correct position.</p>
<p>Can I use the SDR-BEEP on aggressive dogs?</p>	<p>We do not recommend any of our products to be used on aggressive dogs. We recommend you contact your local veterinarian or professional trainer to determine if your dog might be aggressive.</p>
<p>What is the range of the SDR-BEEP?</p>	<p>The range you get with your SDR-BEEP is up to 500 yards. This range will vary depending on which SportDOG Transmitter you pair it with. Range can also be affected by terrain, weather, vegetation, and transmission from other radio devices.</p>
<p>How long can I continuously deliver stimulation to my dog?</p>	<p>The maximum amount of time you can press the Continuous Stimulation Button and deliver stimulation to your dog continuously is 8 seconds. After eight seconds, the Remote Transmitter will time-out, and the Continuous Stimulation Button must be released and pressed again.</p>
<p>What do I do if my dog’s neck becomes red and irritated?</p>	<p>This condition is due to the Contact Points irritating the skin. Discontinue use of the Collar Receiver for a few days. If the condition persists beyond 48 hours, see your veterinarian. Once the skin returns to normal, replace Collar Receiver, and monitor the skin condition closely.</p>

Can I use the Remote Beeper by itself?	Yes, the Remote Beeper can be used independently without the Collar Receiver. However, it is recommended to have a counter weight, like the Collar Receiver, in order to keep the Remote Beeper on top of the dog's neck.
Can my Collar Receiver be used around salt water?	If the Collar Receiver is used in or around salt water, the Collar Receiver should be rinsed with fresh water following each use. Prior to rinsing, the rubber Charging Jack cover should be removed. Replace it after the Collar Receiver has air-dried.

For additional information and FAQ's, please visit www.sportdogbrand.com.

Troubleshooting

The answers to these questions should help you solve any problem you have with this system. If they do not, please contact the Customer Care Center at 1-800-732-0144 or visit our website at www.sportdogbrand.com.

My dog is not responding when I press a button.	<ul style="list-style-type: none"> • Check to see if the Collar Receiver has been turned on. • If your range has reduced from the first time you have used it, please check to see if the battery is low in either the Remote Transmitter or Collar Receiver. • Many factors can impact the range you have with the SDR-BEEP such as terrain, weather, vegetation, and transmission from other radio devices. • You can verify the Collar Receiver is delivering stimulation to your dog by placing the test light on the Collar Receiver. • Increase the Intensity Dial. • Make sure the Collar Receiver's Contact Points are placed snugly against your dog's skin. • If you notice your operating time dropping to about half the original time, your Collar Receiver battery needs to be replaced. Contact the Customer Care Center to purchase a new one.
My remote beeper does not beep when the dog is moving or when he is on point.	<ul style="list-style-type: none"> • Check to see if the Remote Beeper has been turned on. • If the Locate button was pressed, then this will disable the beeper functions of the Remote Beeper. • To enable the beeper functions, press and release the run mode button for the UplandHunter™ Remote Transmitter. The Remote Beeper should double beep to confirm receipt of signal. • For non-UplandHunter™ Remote Transmitters, press and hold the Tone Button for 3 seconds.

<p>The Collar Receiver will not turn on.</p>	<ul style="list-style-type: none"> • Make sure the Collar Receiver has been charged. For the initial charge, be sure to charge it for 24 hours. Future charges only take 12 hours.
<p>The Collar Receiver is not responding to the Remote Transmitter.</p>	<ul style="list-style-type: none"> • Verify the Collar Receiver has been turned on. Refer to “Turning the Collar Receiver On and Off.” • Refer to “Reset the Collar Receiver.” • Verify the toggle switch is in the correct position.
<p>The Remote Beeper is not responding to the Remote Transmitter.</p>	<ul style="list-style-type: none"> • Verify the Remote Beeper has been turned on. Refer to “Turning the Remote Beeper On and Off.” • Refer to “Reset the Remote Beeper.” • Verify the toggle switch is in the correct position.
<p>My remote beeper cannot be reset.</p>	<ul style="list-style-type: none"> • Verify the Remote Beeper has been turned on. Refer to “Turning the Remote Beeper On and Off.” • Refer to “Reset the Remote Beeper.” <p><i>Note: Only the Locate Button or Tone Button can program/reset the Remote Beeper.</i></p>
<p>The Remote Beeper cannot be programmed with the Tone or Run Mode.</p>	<ul style="list-style-type: none"> • Follow the directions on page 8. <p><i>Note: After the Tone has been programmed, within 2 seconds of releasing the ON/OFF Button, the ON/OFF Button must be pressed and held again to program the Run Mode.</i></p>

Terms of Use and Limitation of Liability

1. Terms of Use

This Product is offered to you conditioned upon your acceptance without modification of the terms, conditions and notices contained herein. Usage of this product implies acceptance of all such terms, conditions, and notices.

2. Proper Use

This Product is designed for use with dogs where training is desired. The specific temperament of your dog may not work with this product. We recommend that you not use this product if your dog is less than 8 pounds or if your dog is aggressive. If you are unsure whether this is appropriate for your dog, please consult your veterinarian, certified trainer or contact our Customer Care Center at 1-800-732-0144.

Proper use includes reviewing the entire Operating and Training Guide provided with your product and any specific Caution statements.

3. No Unlawful or Prohibited Use

This Product is designed for use with dogs only. This dog training device is not intended to harm, injure, or provoke. Using this product in a way that is not intended could result in violation of Federal, State or local laws.

4. Limitation of Liability

In no event shall Radio Systems Corporation be liable for any direct, indirect, punitive, incidental, special or consequential damages, or any damages whatsoever arising out of or connected with the use or misuse of this Product. Buyer assumes all risks and liability from the use of this Product.

5. Modification of Terms and Conditions

Radio Systems Corporation reserves the right to change the terms, conditions and notices under which this Product is offered.





Radio Systems Corporation
10427 Electric Avenue
Knoxville, TN 37932
1-800-732-0144
www.sportdogbrand.com
400-827

Protected by Patent #7,017,524

©Copyright 2006, Radio Systems Corporation