Add-A-Beeper™ SD-AB Operating Guide

Please read this entire guide before beginning

Thank you for choosing SportDOG Brand™. Used properly, this product will help you train your dog efficiently and safely. To ensure your satisfaction, please review this owner's manual thoroughly. If you have questions regarding this product's operation, please see this manual's Frequently Asked Questions or Troubleshooting section, contact our Customer Care Center at 1-800-732-0144, or visit our website at www.sportdogbrand.com.

Table of Contents

Key Definitions - Add-A-Beeper™ 3
Prepare the Add-A-Beeper 4
To Turn the Add-A-Beeper On/Off 5
Reset the Add-A-Beeper 7
Program the Add-A-Beeper 8
Fit the Add-A-Beeper to Your Dog 10
Program the Add-A-Beeper to Your System: SD-400, SD-400S, SD-402, SD-800 and SD-1800 .. 12
    SD-1200 13
    SD-2400 13
Using the Add-A-Beeper 13
Frequently Asked Questions 14
Troubleshooting 15
Terms of Use and Limitation of Liability 18

Key Definitions - Add-A-Beeper™

Add-A-Beeper: Receives the radio signal from the Remote Transmitter and beeps with a tone and frequency set by the user. It is waterproof and can be submerged in water.

On/Off Button: Turns the beeper on and off. The Add-A-Beeper functions can be disabled from the Remote Transmitter, but the Add-A-Beeper should be turned off using this button when not in use to conserve battery life.

Indicator Light: Verifies that the Add-A-Beeper is functioning and also serves as a low-battery indicator.

Beeper Speaker: The point at which the sound is produced.

Battery Compartment: Holds the Add-A-Beeper's 3-volt lithium battery.

Add-A-Beeper

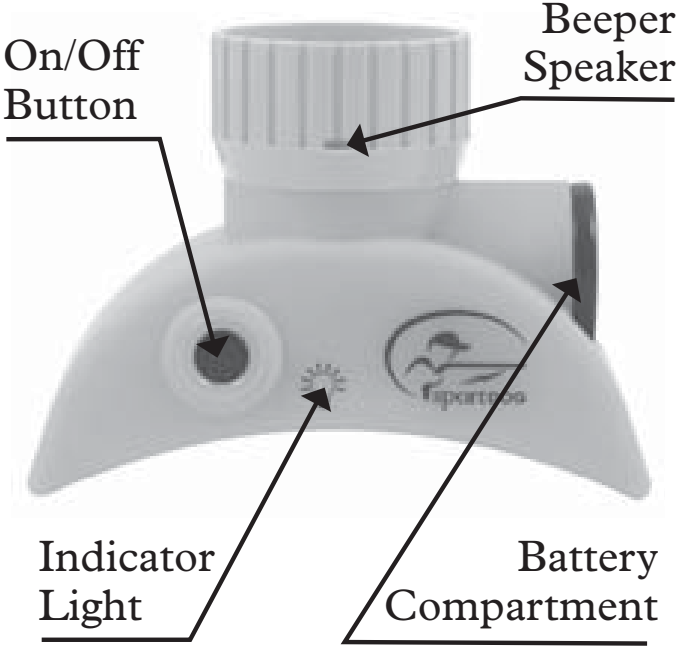

Prepare the Add-A-Beeper™

Insert the Battery

1. Remove the battery cover.
2. Insert the CR-123 3-volt lithium battery with the positive (+) end facing outward.
3. Replace the battery cover.

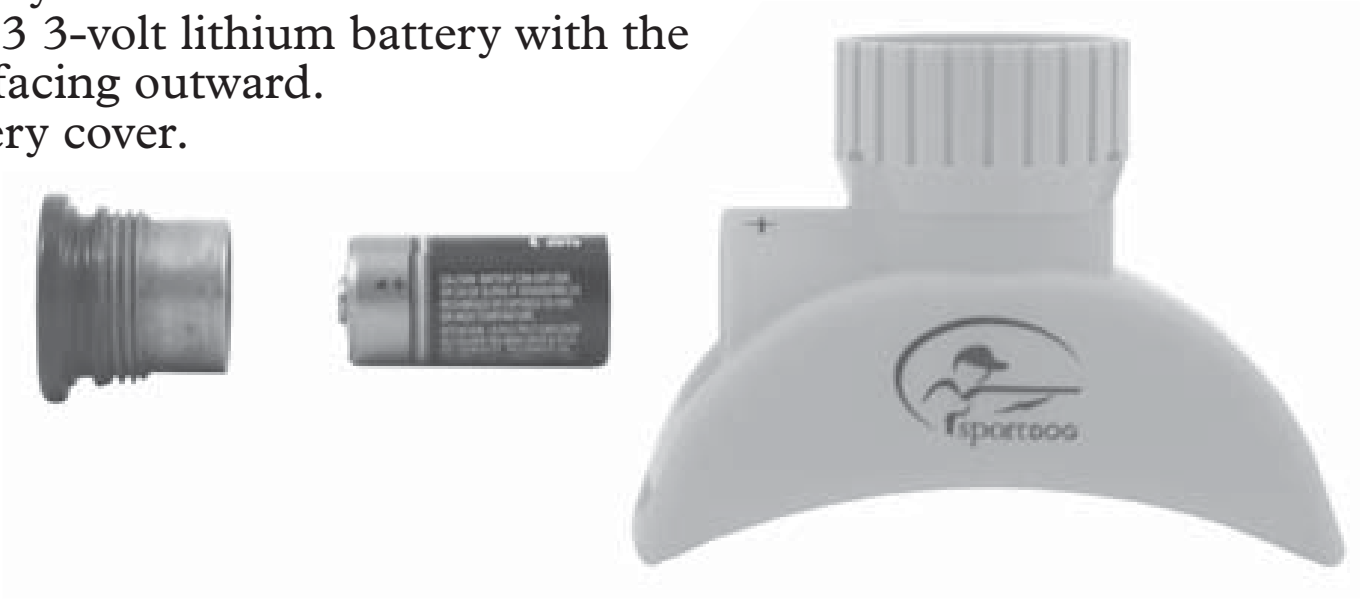

To Turn the Add-A-Beeper™ On/Off

To Turn the Add-A-Beeper On:

1. Press and hold the On/Off Button until the Add-A-Beeper's Indicator Light comes on and the Add-A-Beeper beeps 1 time.
2. Release the On/Off Button.

The Add-A-Beeper's Indicator Light will flash until the Add-A-Beeper is turned off.

The flashing light indicates the Add-A-Beeper is ready to receive a radio signal from the Remote Transmitter.

To Turn the Add-A-Beeper Off:

1. Press and hold the On/Off Button until the Add-A-Beeper's Indicator Light comes on and the Add-A-Beeper beeps 2 times.
2. Release the On/Off Button.

Note: The Add-A-Beeper will provide approximately 100 hours of "on" time depending on how frequently the beeper function is activated and depending on which Tone Mode the Add-A-Beeper is set to.

Beeper Indicator Light

Add-A-Beeper™ Function	Indicator Light Response
Add-A-Beeper On – Good Battery	Flashes twice every second
Add-A-Beeper On – Low Battery	Flashes once every second

Reset the Add-A-Beeper™

To reset the Add-A-Beeper to work with a new Remote Transmitter or to reprogram a new Add-A-Beeper to work with your existing Remote Transmitter:

A. Turn the Add-A-Beeper off.

B. Press and hold the On/Off Button. The Add-A-Beeper's Indicator Light will come on, then turn off after 4-5 seconds. If the On/Off Button is released too early, the Add-A-Beeper's Indicator Light will begin flashing as normal. If this occurs, start over and repeat from **A.**

C. After the Add-A-Beeper's Indicator Light has turned off, release the On/Off Button.

D. Press and hold the Locate Button for the UplandHunter™ Transmitter or the Tone Only Button on all other Remote Transmitters (except SD-3200) until the Add-A-Beeper's Indicator Light flashes 5 times. You may need to hold both units 2-3 feet from each other before this occurs. Once the Add-A-Beeper's Indicator Light has flashed 5 times, the Add-A-Beeper has been reset and will begin flashing as normal. If the Add-A-Beeper's Indicator Light does not flash 5 times, start over and repeat from **A.**

Program the Add-A-Beeper™

To Set the Tone:

1. Reset the Add-A-Beeper (see page 7).
2. Turn the Add-A-Beeper off.
3. Press and hold the ON/OFF button. After 8 seconds, the Add-A-Beeper will start to emit the different tones. For a list of tones, refer to the chart on the right.
4. Continue holding the ON/OFF button until the desired tone is emitted. Release the ON/OFF button.

	TONE
1	Low Volume Hawk
2	High Volume Hawk
3	Bobwhite Quail Call
4	Triple Beep
5	Low Volume Beep
6	High Volume Beep
7	Double High Volume Beep
8	High Falling to Low Volume
9	Double High Falling to Low Volume

To Set the Run Mode:

To program the Run Mode, press the ON/OFF button again within 2 seconds of programming the Tone (see page 8). The Add-A-Beeper™ will emit a single beep for Mode 1, a double beep for Mode 2, and a triple beep for Mode 3. When the desired mode is heard, release the ON/OFF button. The unit will then go into normal operating mode and the LED will blink every second.

MODE 1	Silent	No beep when dog is running/Beeps once per second when dog is on point.
MODE 2	5 Second	Beeps every 5 seconds when dog is running/Beeps once per second when dog is on point.
MODE 3	10 Second	Beeps every 10 seconds when dog is running/Beeps once per second when dog is on point.

Fit the Add-A-Beeper™ to Your Dog

This system is designed so you can add or remove the Add-A-Beeper to or from the collar strap as needed.

To Place the Add-A-Beeper on the Collar Strap:

1. Press the green rubber saddle into the opening at the bottom of the beeper.

2. Thread the end of the collar strap through the slot in the beeper. Continue sliding it through the slot in the saddle and then through the slots on the opposite side of the saddle and beeper.

3. Slide the saddle and Add-A-Beeper a few more inches up the Collar Strap.

Note: The saddle creates a very snug fit for the Add-A-Beeper. This snug fit is intentional to keep the Add-A-Beeper from sliding on the strap.

To Place the Entire System on Your Dog:

1. With your dog standing, place the Collar Strap around the narrowest part of your dog's neck.
2. Ideally, the Collar Receiver should be centered at the front of the dog's neck and the Add-A-Beeper™ should be centered behind the dog's head. Slide the Add-A-Beeper as needed to position it properly.
3. The Collar Strap should fit snugly, yet be loose enough to allow one finger to fit between the strap and your dog's neck.
4. Allow your dog to wear the collar for several minutes, and then recheck the fit.

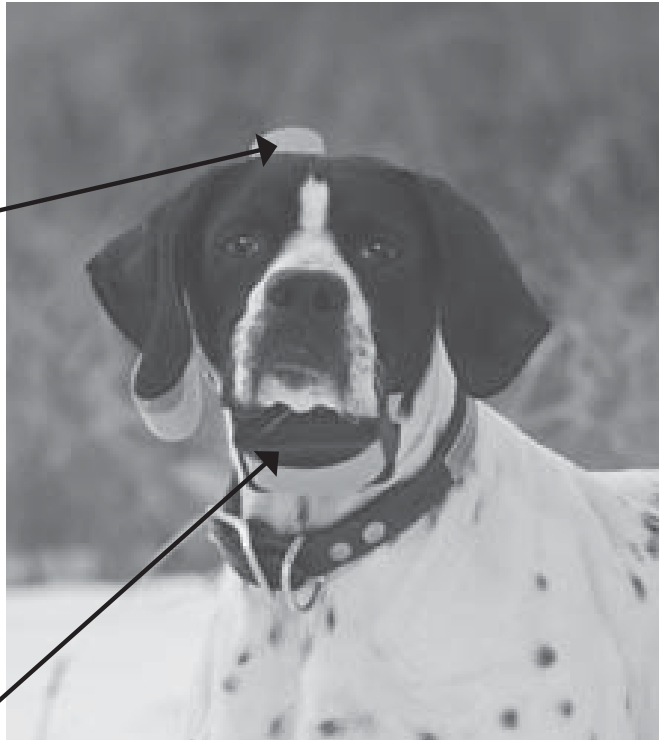

Note: The Add-A-Beeper™ can be used on the collar strap without the Collar Receiver. To remove the Collar Receiver, simply slide the saddle and Add-A-Beeper off of the strap, and then do the same with the Collar Receiver. Replace the saddle and Add-A-Beeper. The Add-A-Beeper, without the Collar Receiver, may shift due to movement.

Program the Add-A-Beeper to Your System: SD-400, SD-400S, SD-402, SD-800 and SD-1800

To use the Add-A-Beeper with your systems, make sure the Transmitter is set to modes 1, 2, 3, or 5. DO NOT set the Transmitter to modes 4 or 7.

For using the Add-A-Beeper with 2 dogs, a SD-1800 system must be used.

SD-1200

To use the Add-A-Beeper™ with your SD-1200 system, make sure the Transmitter is set to modes 4 or 7.

SD-2400

To use the Add-A-Beeper with your SD-2400 system, simply press the green button.

Using the Add-A-Beeper

In normal operating mode (Run Mode or Point Mode), if the Tone Button is pressed, the Add-A-Beeper goes into Locate Mode. In Locate Mode, at each press of the Tone Button, the Add-A-Beeper emits the tone once and becomes silent. To go back to normal mode (Run Mode or Point Mode), press and hold the Tone Button for 3 seconds until a beep is heard on the Add-A-Beeper. The Add-A-Beeper will then exit the Locate Mode.

Frequently Asked Questions

Can I use the Add-A-Beeper™ with any SportDOG Remote Transmitter?	Your Add-A-Beeper is compatible with all SportDOG Brand™ SD-400 Series, SD-800 Series, SD-1800, SD-1850, SD-2000, SD-2400, SD-2500 and SD-3000 models.
What is the range of the Add-A-Beeper?	The range you get with your Add-A-Beeper is up to 500 yards. This range will vary depending on which SportDOG Transmitter you pair it with. Range can also be affected by terrain, weather, vegetation, and transmission from other radio devices.

Can I use the Add-A-Beeper™ by itself?	Yes, the Add-A-Beeper can be used independently without the Collar Receiver. However, it is recommended to have a counter weight, like the Collar Receiver, in order to keep the Add-A-Beeper on top of the dog's neck.

For additional information and FAQ's, please visit www.sportdogbrand.com.

Troubleshooting

The answers to these questions should help you solve any problem you have with this system. If they do not, please contact the Customer Care Center at 1-800-732-0144 or visit our website at www.sportdogbrand.com.

My Add-A-Beeper™ does not beep when the dog is moving or when he is on point.	• Check to see if the Add-A-Beeper has been turned on. • If the Locate button (for the UplandHunter™ Remote Transmitter) or Tone button (for all other SportDOG Remote Transmitters) was pressed, then this will disable the beeper functions of the Add-A-Beeper. • To enable the beeper functions, press and release the run mode button for the UplandHunter Remote Transmitter. The Add-A-Beeper should double beep to confirm receipt of signal. • For non-UplandHunter Remote Transmitters, press and hold the Tone Button for 3 seconds.

The Add-A-Beeper™ is not responding to the Remote Transmitter.	• Verify the Add-A-Beeper has been turned on. Refer to "To Turn the Add-A-Beeper On/Off." • Refer to "Reset the Add-A-Beeper." • If your Remote Transmitter has a toggle switch, verify that it is in the correct position.
My Add-A-Beeper cannot be reset.	• Verify the Add-A-Beeper has been turned on. Refer to "To Turn the Add-A-Beeper On/Off." • Refer to "Reset the Add-A-Beeper." *Note: Only the Locate Button or Tone Button can program/reset the Add-A-Beeper.*
The Add-A-Beeper cannot be programmed with the Tone or Run Mode.	• Follow the directions on pages 8 and 9. *Note: After the Tone has been programmed, within 2 seconds of releasing the ON/OFF Button, the ON/OFF Button must be pressed and held again to program the Run Mode.*

Terms of Use and Limitation of Liability

1. Terms of Use

This Product is offered to you conditioned upon your acceptance without modification of the terms, conditions and notices contained herein. Usage of this product implies acceptance of all such terms, conditions, and notices.

2. Proper Use

This Product is designed for use with dogs where training is desired. The specific temperament of your dog may not work with this product. We recommend that you not use this product if your dog is less than 8 pounds or if your dog is aggressive. If you are unsure whether this is appropriate for your dog, please consult your veterinarian, certified trainer or contact our Customer Care Center at 1-800-732-0144.

Proper use includes reviewing the entire Operating and Training Guide provided with your product and any specific Caution statements.

3. **No Unlawful or Prohibited Use**
   This Product is designed for use with dogs only. This dog training device is not intended to harm, injure, or provoke. Using this product in a way that is not intended could result in violation of Federal, State or local laws.

4. **Limitation of Liability**
   In no event shall Radio Systems Corporation be liable for any direct, indirect, punitive, incidental, special or consequential damages, or any damages whatsoever arising out of or connected with the use or misuse of this Product. Buyer assumes all risks and liability from the use of this Product.

5. **Modification of Terms and Conditions**
   Radio Systems Corporation reserves the right to change the terms, conditions and notices under which this Product is offered.

Radio Systems Corporation
10427 Electric Avenue
Knoxville, TN 37932
1-800-732-0144
www.sportdogbrand.com
400-828

©Copyright 2006, Radio Systems Corporation